



MACHINE INTERFACE ACCESSORIES



On/Off Remote 1-Station Hand-switch Item #: AA011 or AA375

Shipping Weight: 1 lb (0.5 kg)

- » Conveniently remote start unit from 6 feet away
- » AA011 for Velocity, JS0200, JS1200, Medevac Mini, DFH
- » AA375 for SmartVacs, IVACs, MMP, MP, PS Serie

On/Off 2-Station Remote 2-Station Hand-switch Item #: AA012 or AA432

Shipping Weight: 1 lb (0.5 kg)

- » Conveniently remote start unit from 6 feet away
- » 8 feet between stations
- » AA012 for Velocity, JS0200, JS1200, Medevac Mini, DFH
- » AA432 for SmartVacs, IVACs, MMP, MP, PS Series



Remote Foot-pedal

1-Station Foot-pedal
Item #: AA114 or AA175

Shipping Weight: 1 lb (0.5 kg)

- » Conveniently remote start unit from 6 feet away
- » AA114 for Velocity, JS0200, JS1200, Medevac Mini, DFH
- » AA175 for SmartVacs, IVACs, MMP, MP, PS Series



Remote Foot-pedal for 2-Stations

2-Station Foot-pedal
Item #: AA224 or AA442

Shipping Weight: 1 lb (0.5 kg)

- » Conveniently remote start unit from 6 feet away
- » Includes a wired "T" with (2) 6ft long foot-pedals
- » AA224 for Velocity, JS0200, JS1200, Medevac Mini, DFH
- » AA442 for SmartVacs, IVACs, MMP, MP, PS Series

Universal On/Off Foot-Pedal

Remote start any device from 6 ft away (15 A max.)
Item #: H181

Shipping Weight: 1 lb (0.5 kg)

- » Pedal installs into 120 V wall outlet, device plugs into pedal
- » Conveniently remote start your device from 6 feet away
- » Start-stop of all equipment, directly from wall outlet
- » 15 amp (maintained & momentary)



Universal Interface cable

If your machine can output a signal to Auto-Start a Quatro device
Item #: AE427

Shipping Weight: 1 lb (0.5 kg)

- » Allows your machine to function without manual assistance with extractor
- » Auto Start or Stop extractor along with run or fault signals
- » 8 ft (2.5m) long cable
- » End 1: D-Sub connector to connect to Quatro device
- » End 2: stripped wires to connect to your machine
- » Cable supports the following signals: Dry Contact, 1-30v AC/DC, Fault Status Output (Normally Open or Closed), Run status Output (open)
- » Contact Quatro for additional support



ASV (Auto Start Valve)

Airflow control AND remotely start/stop dust collector at each workstation
Connect several ASVs to one dust collector to accommodate multiple workstations

Dimensions (HxWxL): 6.2x7.3x2.5 in (16x19x6 cm)
Shipping Weight: 2 lb (1 kg)

- » Slide Valve opens and closes for a dual purpose:
Controls suction by blocking airflow at idle workstations
Remotely switches dust collector on and off at each workstation
- » Connect as many ASVs as needed to one dust collector. Dust collector will remain on as long as one valve is open
- » Clamp or bolt ASVs directly to workbench
- » FRONT AND REAR COLLAR DIAMETERS CAN VARY (1.5 in, 2 in, 2.5 in or 3 in)
- » Included: 25 ft cable (10 ft cable also available)
- » Optional: Table-Stand Support Bracket (#AA423), Cable to connect to unit (#AE750) (1 cable per unit)

PART NUMBER SELECTION GUIDE		FRONT DIAMETER			
		1.5"	2"	2.5"	3"
REAR DIAMETER	1.5"	AA413-A11-20	AA413-A21-20	AA413-A51-20	AA413-A31-20
	2"	AA413-A12-20	AA413-A22-20	AA413-A52-20	AA413-A32-20
	2.5"	AA413-A15-20	AA413-A25-20	AA413-A55-20	AA413-A35-20
	3"	AA413-A13-20	AA413-A23-20	AA413-A53-20	AA413-A33-20

ASV (Auto Start Valve) with integrated support stand

Airflow control AND remotely start/stop dust collector at each workstation
Connect several ASVs to one dust collector to accommodate multiple workstations

Dimensions (HxWxL): 6.2x7.3x2.5 in (16x19x6 cm)
Shipping Weight: 2 lb (1 kg)

- » Slide Valve opens and closes for a dual purpose:
Controls suction by blocking airflow at idle workstations
Remotely switches dust collector on and off at each workstation
- » Connect as many ASVs as needed to one dust collector. Dust collector will remain on as long as one valve is open
- » Clamp or bolt the integrated support stand directly to workbench
- » FRONT AND REAR COLLAR DIAMETERS CAN VARY (1.5 in, 2 in, 2.5 in or 3 in)
- » Included: 25 ft cable (10 ft cable also available)
- » Optional: Cable to connect to unit (#AE750) (1 cable per unit)



PART NUMBER SELECTION GUIDE		FRONT DIAMETER			
		1.5"	2"	2.5"	3"
REAR DIAMETER	1.5"	AA433-A11-20	AA433-A21-20	AA433-A51-20	AA433-A31-20
	2"	AA433-A12-20	AA433-A22-20	AA433-A52-20	AA433-A32-20
	2.5"	AA433-A15-20	AA433-A25-20	AA433-A55-20	AA433-A35-20
	3"	AA433-A13-20	AA433-A23-20	AA433-A53-20	AA433-A33-20